

SHEET 1: DMX channel mode

HSI	8Bit	16Bit	Function	Values		
	1	1	Red	000-255	0%-100%	
	2	2	Green	000-255	0%-100%	
	3	3	Blue	000-255	0%-100%	
	4	4	Warm White	000-255	0%-100%	
	5	5	Lime	000-255	0%-100%	
	6	6	Cyan	000-255	0%-100%	
		7	Strobe	<u>Shutter, Strobe:</u>	strobe	
				0-31	LED OFF	
				32-63	LED ON	
				64-95	Strobe speed slow to fast	
				96-127	LED ON	
				128-159	Pulse Strobe slow to fast	
				160-191	LED ON	
				192-223	random strobe slow to fast	
				224-255	LED ON	
		8	Dimmer	000-255	0-100%	
		9	Dim Fine	000-255	0-100%	
		10	CCT	000 001-255	Idle CCT from 2500K-10000K	
		11	GReenPoint	0	Idle	Green Compensation (it only works after open CTO)
				1-127	Full Minus Green to Neutral	
				128	Neutral White	
				129-255	Neutral to Full Plus Green	
		12	DimMode	0 - 20	Standard (default)	
				21 - 40	Stage	
				41 - 60	TV	
				61 - 80	Archictural	
				81 - 100	Theatre	
				101 - 255	From Menu Default	
				0 -100	idle	
				Change Refresh Rate (Hz)		
				101 - 105	900	
				106 - 110	1000	
				111 - 115	1100	

				116 - 120	1200 (default)	
				121 - 125	1300	
				126 - 130	1400	
				131 - 135	1500	
				136 - 140	2500	
				141 - 145	4000	
		13	Control	146 - 150	5000	
				151 - 160	10000	
				161 - 165	15000	
				166 - 170	20000	
				171 - 175	25000	
				175-200	Idle	
				Dimmer Curves		
				201-210	Dimmer Curve Linear (default)	
				211-220	Dimmer Curve Square	
				221-230	Dimmer Curve Inverse Square	
				231-240	Dimmer Curve S-Curve	
				241-255	Idle	
1				Hue	0-100%	
2				Saturation	0-100%	
3				Intensity	0-100%	