

2 DMX Channel	
CH 1	51 static color
CH 2	ZOOM

4 DMX Channel

DMX Channel	Value	Function
1	0—255	master dimmer
2	0—255	Hue
3	0—255	Staturation
4	0—255	zoom min to max

8 DMX Channel

DMX Channel	Value	Function
1	0—255	Master dimmer
2	0—255	red
3	0—255	green
4	0—255	blue
5	0—255	white
6	0—255	strobe
		0-8 no function
		9-255 strobe from slow to fast
7	0—255	zoom min to max
8	0—255	motor speed

17 DMX Channel

DMX Channel	Value	Function
1	0—255	Master dimmer
2	0—255	No function
3	0—255	Red hight 8 byte
4	0—255	Red low 8 byte
5	0—255	Green hight 8 byte
6	0—255	Green low 8 byte
7	0—255	Blue hight 8 byte
8	0—255	Blue low 8 byte
9	0—255	White hight 8 byte
10	0—255	White low 8 byte
11	0—49	Default dimmer
	50—99	dimmer speed 1
	100—149	dimmer speed 2
	150—199	dimmer speed 3
	200—255	dimmer speed 4
12	0—255	strobe
		0-8 no function
		9-255 strobe from slow to fast
13	0—255	zoom min to max
14	0—255	motor speed
15	0 -- 7	Default
	8—10	program 1
	11—20	program 2
	21—30	program 3
	31—40	program 4
	41—50	program 5
	51—60	program 6
	61—70	program 7
	71—80	program 8
	81—90	program 9
	91—100	program 10
	101—109	program 11
	>109	None
16	0—255	auto speed
17	201—220	motor reset

19 DMX Channel

DMX Channel	Value	Function
1	0—255	Master dimmer
2	0—255	No function
3	0—255	Red hight 8 byte
4	0—255	Red low 8 byte
5	0—255	Green hight 8 byte
6	0—255	Green low 8 byte
7	0—255	Blue hight 8 byte
8	0—255	Blue low 8 byte
9	0—255	White hight 8 byte
10	0—255	White low 8 byte
11	0—49	Default dimmer
	50—99	dimmer speed 1
	100—149	dimmer speed 2
	150—199	dimmer speed 3
	200—255	dimmer speed 4
12	0—255	36 macros color
13	0—255	strobe
		0-8 no function
		9-255 strobe from slow to fast
14	0—255	zoom min to max
15	0—255	motor speed
16	0—255	ID number(0-66)
17	0 -- 7	Default
	8—10	program 1
	11—20	program 2
	21—30	program 3
	31—40	program 4
	41—50	program 5
	51—60	program 6
	61—70	program 7
	71—80	program 8
	81—90	program 9
	91—100	program 10
	101—109	program 11
	>109	None
18	0—255	auto speed
19	201—220	motor reset